

WARRANTY

The Feetflex warranty against defects in material and workmanship lasts one year from the date of purchase. Keep original receipt for warranty service,

Important: This warranty does not cover damages resulting from accidents, misuse, alterations, abuse, lack of reasonable care, or performance of services or repairs by an unauthorized service center.

The manufacturers and distributors of the Feetflex do not assume responsibility for any damage caused by misuse or use other than that described in these instructions.

FEET FLEX™


STATIONARY STEPPER



Textile House. 2 Kaufman St.
POB. 50406, Tel-Aviv 61500, Israel
Tel. 972-3-5160281/2, Fax. 972-3-5160283
e-mail:yoavb@halicot.com


1

Hold the Feetflex with the bottom facing your body and the curved edge up. Firmly place thumbs on tabs located on the curved edge, and pull outward from the center.

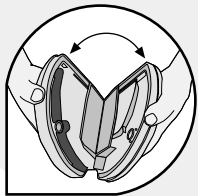


2

Remove rocker bar from its storage place.

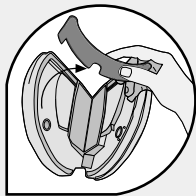


3

Turn the Feetflex over so that the carpet pins are facing down, as in the illustration.

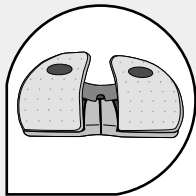


4

Lift pedals up by pulling on the tabs located at the top of the pedals.

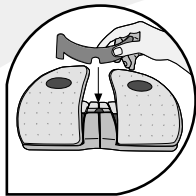

5

Insert the rocker bar into the slot located in the middle of Feetflex's base, underneath the pedals.

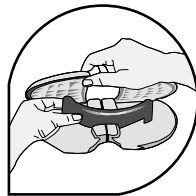

6

Place on a carpeted surface, sit down, you may remove your shoes, and "walk while you sit"!



Important Notices:

- Safe when used as directed,
- Do not stand on the device!
- The Feetflex was designed for use while sitting only.
- The device is not a toy. Keep it away from children.

- Do not use the device if damaged. Pedals should move freely without effort.
- Difficulty in moving pedals and/or loud noise may indicate device is damaged and you are advised to stop using the device and contact your dealer.

Cleaning Instruction:

Wipe with soapy cloth and dry in shade, Do not soak!
We wish you pleasant walking and improved



Only use while sitting